



# **USER'S GUIDE**

5" Smart HD Baby Monitor with Touch Screen Viewer

Nursery Pal Premium, Nursery Pal Premium Twin

The features described in this user's guide are subject to modifications without prior notice.

# Welcome...

### to your new Hubble Smart Baby Monitor!

Thank you for purchasing your new Hubble Smart Nursery product. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records. For warranty service of your Hubble product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registra-tion is not required for warranty coverage.

For questions, warranty, support or service related to the product, please contact us by

For product related questions, please call:

Live Chat: hubbleconnected.com

Email: support@hubbleconnected.com

This User's Guide provides you with all the information you need to get the most from your product.


Before you use the Baby Monitor, we recommend you fully charge the batteries in the Baby Unit and Parent Unit, so that they continue to work if you disconnect them from the power supplies to carry to other locations. Please read the Safety Instructions on pages 7-9 before you install the units.

### Got everything?

- 1 x Parent Unit
- 1 x Baby Unit (Camera)
- 1 x Power adapter for Parent Unit
- 1 x Power adapter for Baby Unit

In multi-camera packs, you will find one or more additional Baby Units with power adapters.

### Overview of the Parent Unit

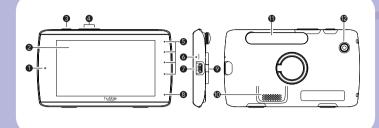


- 1. Microphone
- 2. Touch screen display
- Power button Press and Hold to turn the Parent Unit ON/OFF.
- Volume Up/Down botton Press to decrease / increase Volume level.
- 5. Sound Level LEDs (Green, Green, Amber, Red)

- Reset key (recessed use small pin)
- 7. Power Socket
- Charging LED RED when mains power connected.
- 9. Ring Stand
- 10. Speaker
- 11. Antenna
- 12. Flashlight

### Display icons

2	Signal Level (5 Levels)	
•	Night Vision Mode (Video also changes to Black/White).	
Ţ	Indicates the screen off timer is set.	
<b>ರು</b> )	Volume Level Control (8 Levels).	
x	No Baby Unit detected.	
m	Battery Level Indication (4 Levels).	

### Overview of Your Baby Unit

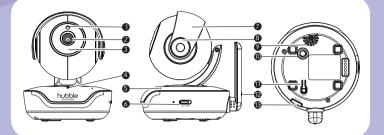

- Photo Sensor (Night Vision Mode)
- 2. Camera Lens
- 3. Infrared LEDs
- Power LED
   On when linked to Parent Unit Flashes when searching for Parent Unit
- 5. Microphone
- 6. POWER ON/OFF switch

- 7. Privacy Protector
- 8. Protector Release Knob
- 9. Speaker
- Flexible Grip mounting screw hole
- 11. PAIR buttor
- 12. Temperature Sensor
- 13. Power Adapter Socket

#### Important guidelines for installing your Nursery Pal Premium

- To use your Video Monitor Baby and Parent Units together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, a metallic door or reinforced concrete, between the Baby Unit and Parent Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Other 2.4GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth<sup>™</sup> systems, microwave ovens or other Baby Monitors, may cause interference with this product, so keep the Baby Monitor at least 5ft (1.5m) away from these types of product, or switch them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the rooms.



## Table of contents

1.	Safety	/ In	structions	7	
2.	Getting Started				
	2.1 Cc	onn	ecting the Power Supply of the Baby Unit	10	
			ecting the Power Supply of the Parent Unit		
	2.3 Re	gis	tration (Pairing)	12	
3.	Using	the	e Baby Monitor	13	
	3.1 To	uch	n screen operation		
			tness		
		-	1		
	3.4 Au	Idic	Media	14	
	3.4	4.1	Personal Recording Playback	14	
	3.4	1.2	Lullaby/Soothing Sounds Playback	14	
	3.4	4.3	Audio Book (English only) Playback	14	
	3.4	1.4	Volume Level of Audio Playback	15	
	3.5 Fla	15			
	3.6 Alarm			15	
		15			
	3.8 Ca	me	era Control	15	
	3.8	3.1	Add (pair) a camera	15	
	3.8	3.2	View a camera	16	
	3.8	3.3	Delete a camera	16	
	3.8	3.4	Scan camera	16	
		16			
	3.10 Power Saving mode				
	3.11 View multiple cameras on screen				
	3.12	Ga	mes and Videos		





4.	Wi-Fi® Internet Viewing			
	4.1	Minim	num System Requirements	
	4.2	Gettir	ng started - Connecting Devices	
	4.3	Setup		
	4.4		Account and Camera Setup on Android™ Devices or one®/iPad®	
		4.4.1	Power ON and Connect the Camera	
		4.4.2	Download HubbleClub by Hubble Connected App	
		4.4.3	Sign up with Hubble on your smart device	
		4.4.4	Add the Camera to your account	21
5.	Pro	cedur	e for Resetting the Camera	24
6.	Dis	posal	of the Device (environment)	24
7.	Cle	aning		25
9.	Ge	neral I	nformation	28
10.	. Technical Specifications			





# 1. Safety Instructions



Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (1m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.







### Baby Unit SET UP & USE:

- Choose a location for the Baby Unit that will provide the best view of your baby in their crib.
- Place the Baby Unit on a flat surface, such as a dresser, desk, or shelf or mount the Unit securely using the Flexible Grip or Tripod mount screw hole on the underside of the stand.
- NEVER place the Baby Unit or cords in the crib or within reach of the baby (the unit and cords should be more than 3 feet away).

#### WARNING

This Smart Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not place the Baby Unit or cords in the crib or within reach of the baby (the unit and cords should be more than 3 feet away).
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor near water.
- Do not place the Baby Monitor near a heat source.





- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery packs.
- Do not touch the plug contacts with sharp or metal objects.
- The Unit should be set up and used so that parts of the user's body other than the hands are maintained at a distance of approximately 8 inches (20 cm) or more.

#### CAUTION

The Parent Unit includes a built-in, lithium-ion rechargeable battery pack, which are not a user-accessible items. If you think the batteries needs replacing, please contact the helpline. Do not try to replace them yourself. Risk of explosion if batteries are replaced by delete unapproved battery types.





# 2. Getting Started

2.1 Connecting the Power Supply of the Baby Unit



- Connect the USB type-C plug of the power adapter to the Baby Unit and the other end to a suitable electrical outlet.
- Only use the enclosed adapter (5V DC / 1500mA).
- Ensure the ON/OFF switch is at the "ON" position.

#### **Privacy Protector**

This is to disable the live camera video feed by blocking the camera lens.

- Press the knob to release the lock.
- You can move the protector to its open and close positions after the lock is released.
- When you hear the click sound the protector is at its proper positions.

#### IMPORTANT:

Make sure the privacy protector does not cover the camera lens when in use. Sound is still audible when the protector covers the camera lens.

 








#### 2.2 Connecting the Power Supply of the Parent Unit.



- Connect the USB Type-C plug of the power adapter to the parent unit and the other end to the electrical outlet. Only use the enclosed adapter (5V DC / 1500mA).
- A rechargeable battery (Lithium-ion battery 2000mAh) inside the Parent Unit allows you to move it without losing the link and picture from the Baby Unit. We recommend charging for at least 16 hours before first use, and when the Parent Unit indicates the battery is low.
- Press and hold the POWER button on the top of the Parent Unit to turn it ON.
- Flip out the stand on the back of the Parent Unit and rotate it by 90 degrees to set up the desktop stand







#### 2.3 Registration (Pairing)

The Baby Monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit. To re-register your Baby Unit, or register a new Baby Unit, follow the procedures below:

- 1. Press the **₽** button and the menu bar will pop up.
- Press the 

   LEFT button or 

   RIGHT button until 
   <sup>Q</sup>
   is highlighted, and
   the 
   M del/
   <sup>I</sup>
   add/
   <sup>Q</sup>
   view/
   <sup>Q</sup>
   scan menu will pop up.
- Press the ▲ UP button or ▼ DOWN button to select ➡ add, and press the OK button to confirm.
- Camera 
   / 2 / 3 / 4 will pop up. Press the ▲ UP button or ▼ DOWN button to select the desired Camera, and press the OK button to start searching for a camera unit.

**Note:** If a camera is currently paired with the Parent Unit, its camera location (with a \* against it) cannot be selected for a new registration.

 Press and hold the PAIR button on the underside of the Baby Unit until the Parent Unit finds the camera, beeps and PAIR OK appears on the screen. The video from the camera will then appear.

#### Note:

A camera can only be registered to one Parent Unit at any one time.



 


# 3. Using the Baby Monitor

3.1 Touch screen operation



Swipe up at the screen bottom to pop up the menu bar. Swipe down at the screen bottom to hide the menu bar. Scroll left/right on the menu bar to see all the options.



Swipe left/right to pan the camera view. Swipe up/down to tilt the camera view.

#### Note:

- Function works when viewing.
- Function does not work when the menu is active.





#### 3.2 Brightness

- 1. Tap the icon at the menu bar and the brightness status bar will pop up.
- Tap the \$\chi\$ icon or \$\chi\$ icon to select the desired brightness from level 1 ~ 8. (The default brightness is level 4.)

#### 3.3 Zoom

- 1. Tap the  $\, \ensuremath{\mathfrak{P}}$  icon at the menu bar and the brightness status bar will pop up.
- 2. Tap the  $\mathfrak{O}$  icon or  $\mathfrak{B}$  button to select 1X or 4X zoom.

#### 3.4 Audio Media

You can playback audio content - Lullabies, Soothing Sounds and Audio Book (English only) on the Baby Unit. You have 4 preloaded lullabies/ soothing sounds and 4 audio books in the Baby Unit.

#### 3.4.1 Personal Recording Playback

The unit allows playback your personal audio to soothe your baby, before playback, please record a personal audio via HubbleClub by Hubble Connected App.

- 1. Tap the  $\triangleright$  icon at the menu bar, then the select option will pop up.
- 2. Tap the 🖢 icon to view the desired Personal Recording. The Personal Recording names appear on the screen.
- 3. Tap the desired recording to play the selection to soothe your baby.

#### 3.4.2 Lullaby/Soothing Sounds Playback

- 1. Tap the  $\triangleright$  icon at the menu bar, then the select option will pop up.
- Tap the J icon to view the desired Lullaby/Soothing Sounds. The song names appear on the screen.
- 3. Tap the desired Lullaby to play the selection to soothe your baby.

#### 3.4.3 Audio Book (English only) Playback

- 1. Tap the  $\triangleright$  icon at the menu bar, then the select option will pop up.
- Tap the I icon to view the desired Audio Book. The book titles appear on the screen.
- 3. Tap the desired Audio Book to play the selection.





#### 3.4.4 Volume Level of Audio Playback

- 1. Tap the  $\triangleright$  icon at the menu bar, then the select option will pop up.
- 2. Tap the  $rac{(1)}{2}$  icon or  $rac{(1)}{2}$  icon to select the desired Volume Level from level 1 ~ 4. (The default brightness is level 2.)

#### 3.5 Flashlight

Tap the  $\frac{\omega}{T}$  icon at the menu bar to turn the flashlight on and the  $\frac{\omega}{T}$  icon will appears on the screen.

#### 3.6 Alarm

- 1. Tap the 🕥 icon at the menu bar.
- Tap on to turn the alarm on then tap the ▲ icon or ▼ icon to select the alarm time.
- 3. Confirm the alarm time by tapping **set**, the 🕥 icon will appear on status bar.
- 4. If an alarm time is selected, the Parent Unit will beep for about 45 seconds, press any key to stop the alarm.

#### 3.7 Talk Mode

- 1. Tap 🍨 icon on the menu bar, 🍨 Touch to Talk will display on the screen.
- 2. Tap 🎍 to talk to your baby through the Baby Unit's speaker.
- 3. Tap 🔲 icon to stop talkback.

**Note:** you will not hear the sound from baby end after entering the talk back mode.

#### 3.8 Camera Control

#### 3.8.1 Add (pair) a camera

- 1. Tap the 🛨 icon at the menu bar.
- 2. Tap + icon and Camera 🛛 / 🖓 / 🖓 / 🖓 will pop up.
- 3. Tap 21 / 22 / 23 / 24 icon to select the desired Camera, the parent unit start to search for a camera unit.

**Note:** If a camera is currently paired with the Parent Unit, its camera location (in dark grey color) cannot be selected for a new registration.

 Press and hold the PAIR button on the underside of the Baby Unit until the Parent Unit finds the camera, beeps and PAIR OK appears on the screen. The video from the camera will then appear.





#### Note:

A camera can only be registered to one Parent Unit at any one time.

#### 3.8.2 View a camera

- 1. Tap the 🛨 icon at the menu bar.
- 2. Tap © icon and Camera 🛛 / 🖓 / 🖓 / 🖓 will pop up.
- 3. Tap @1 / @2 / @3 / @4 icon to select the desired Camera to view the picture from that camera.

#### Note:

Only camera locations in dark grey color.

#### 3.8.3 Delete a camera

- 1. Tap the 🛨 icon at the menu bar.
- 2. Tap icon and Camera 🛛 / 🖾 / 🖓 / 🖓 will pop up.
- 3. Tap @1 / @2 / @3 / @4 icon to select the desired Camera to delete that registration.

#### Note:

You are not allowed to delete the camera if there is only one registered camera in the system.

#### 3.8.4 Scan camera

This function is only available when you have more than 1 Baby Unit (Camera).

- 1. Tap the  $\oplus$  icon at the menu bar.
- 2. Tap 🖒 icon and Camera 🛛 / 🖾 2 / 🖓 3 / 🖓 4 will pop up.
- The screen will then display images from different registered cameras in a loop of Camera <u>91</u> / <u>92</u> / <u>93</u> / <u>94</u>, changing about every 12 seconds.

#### 3.9 Temperature

- Tap the licon at the menu bar, the temperatue format °C or °F icon will pop up on the screen.
- 2. Tap °C of °F to select temperature format.





#### 3.10 Power Saving mode

- Tap the D icon at the menu bar, the screen off timer 5 mins, 30 mins or 60 mins will pop up.
- Select audio video off after 5 mins, 30 mins or 60 mins (if operating on batteries only)..

#### Note:

The audio will remain and you can press any key to switch the video back on.

#### 3.11 View multiple cameras on screen

This function is only available when you have more than 1 Baby Unit (Camera). When the Split Screen function is On, you can view multiple cameras on the screen.

- 1. Tap the [icon at the menu bar.
- 2. To select Split Screen On or Off by tapping **on** / **off**.
- When the Split Screen function is On, you can tap the camera to hear the audio from the selected camera.

#### 3.12 Games and Videos

The unit comes packed with entertaining content (videos, picture books games and more).

Tap 🗱 to access Hubble Baby entertaining games and videos.





# 4. Wi-Fi® Internet Viewing

#### 4.1 Minimum System Requirements

#### Android<sup>™</sup> System

Version 7.0 or above

#### iPhone®/iPad® iOS


Version 10.0 or above

#### High Speed (Wi-Fi®) Internet

 At least 0.6 Mbps upload bandwidth per camera (you can test your internet speed on this site: <u>http://www.speedtest.net</u>)

#### 4.2 Getting started - Connecting Devices

#### How does it work?

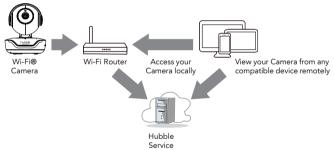

When a user tries to access the Camera, our Hubble server authenticates the user's identity and permits access to the Camera.



4.3 Setup

Connect the Wi-Fi® Camera to the Power Adapter, then plug into mains power. The Camera must be within range of the Wi-Fi® router with which you want to connect. Make sure the password of the router is available for entering during the in-app setup process.

#### Status of LED Indication:

- Pair / Setup state:
   Unconnected state:
  - LED is Blue and Flashing. LED is Red and Flashing.
- Connected state: LED is Blue and always on.
- Video streaming:
- LED is Blue and Flashing.

**Note:** You can only setup via a compatible smartphone or tablet and not via a PC.

#### 4.4 User Account and Camera Setup on Android<sup>™</sup> Devices or iPhone®/iPad®

#### What you need

- Wi-Fi® Camera Unit
- Power adapter for the Camera
- Device with Android<sup>™</sup> system version 7.0 and above
- Or iPhone®/iPad® with iOS version 10.0 and above

#### 4.4.1 Power ON and Connect the Camera

- Switch the parent unit off before connect the camera to Wi-Fi®.
- Connect the power adapter to mains power and insert the plug into the power socket on the back of the Camera Unit, the unit turns on.







### 4.4.2 Download HubbleClub by Hubble Connected App



- Scan the QR code with your smart device and download HubbleClub by Hubble Connected App from the App Store for iOS devices or from the Google Play<sup>™</sup> Store for Android<sup>™</sup> devices.
- Install HubbleClub by Hubble Connected App on your device.

#### 4.4.3 Sign up with Hubble on your smart device

- Ensure that your smart device is connected to your Wi-Fi® router.
- Run HubbleClub by Hubble Connected App, tap Sign Up with Hubble (fig. 1), read through the Privacy Policy, Terms and Conditions, by signing up you agree to our terms of service before tap Done (fig. 2), enter your account information to sign up with Hubble.

#### Note:

If you already have a Hubble App account, please tap Log in with Hubble to go to the next steps.







fig. 2





#### 4.4.4 Add the Camera to your account

- Log in your Hubble Account by entering "User Name" and "Password" • (fig. 3).
- Tap (+) on the screen of your device to add new Camera (fig. 4) •







fig. 4

- To select your device for setting up by tapping Baby Monitoring (fig. 5).
- Tap LUX65CONNECT to add the new camera (fig. 6).







fig. 6





- The following setup instructions will appear on the screen, select your Wi-Fi network and enter "Password" (fig. 7). (Picture A7)
- Power on your camera and wait for the Red LED flashing on the camera. (fig. 8)









- Press and hold the PAIR button at the side of Camera, you will hear a voice prompt "Ready for Pairing" then tap Continue. (fig. 9)
- Tap Generate QR code on your device and hold the QR code 15 to 30 cm in front of Camera to get scanned till you will hear confirmation message " Scanning Sucess" from your device. (fig. 10, fig. 10a)







- It will take a few minutes for the Camera to connect to the Wi-Fi® network before showing the connection status (fig. 11).
- The Camera has been successfully connected, name your Camera (fig. 12).







 If connection fails, please tap Retry and repeat the steps starting from 4.4.4.





# 5. Procedure for Resetting the Camera

**Note:** If your Camera is moved from one router (e.g. home) to another (e.g. office) or you have Camera setup issues, then the Camera must be reset. Please reset the Camera with the following procedures:

- Press and hold the PAIR button approximately 20 seconds, you will hear a long beep thence release PAIR button, wait for the Camera Unit to complete an internal reset procedure. The Red LED will begin to flash when the Camera Unit is reset successfully.
- You can add your Camera again by following the steps in section 4.4.4.

# 6. Disposal of the Device (environment)

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

The internal battery should be disposed of with the Parent unit in an environmentally-friendly manner according to your local regulations.





# 7. Cleaning

Clean the Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

#### Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals – this may cause permanent damage to the product which is not covered by the warranty.
- Keep the Baby Monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.

#### IMPORTANT

Always switch off and disconnect the power adapter before cleaning your baby monitor.







# 8. Help

#### Display

#### No display

- Try recharging the battery pack.
- Reset the Units. Unplug both the Units' electrical power, then plug them back in.
- Is the Unit switched on?
- Press and hold the ON/OFF button 0 on the Parent Unit for 3 seconds to switch it ON.
- Is the correct camera selected? Change the camera number, if necessary.
- Is the video display turned on? Press the VIDEO ON/OFF button 
   to turn it ON.
- When operating using batteries only, the display will go blank after 5 minutes or 30 minutes or 60 minutes to save power (depending on video settings). The Unit is still active and will give you audio alerts. You can reactivate the screen by pressing any button.

#### Registration

#### If the Baby Unit has lost its link with the Parent Unit

- If the Baby Unit is too far away it may be going out of range, so move the Baby Unit closer to the Parent Unit.
- Reset both the Parent Unit and Baby Unit by disconnecting them from the electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Baby Unit and the Parent Unit to synchronize.
- See 2.3 Registration (Pairing), if there is a need to re-register the Units.

#### Interference

#### Noise interference on your Parent Unit

- Your Baby and Parent Units may be too close. Move them further apart.
- Make sure there is at least 1 to 2m between the 2 Units to avoid audio feedback.
- If the Baby Unit is too far away, it may be out of range. Move the Baby Unit closer to the Parent Unit.





- Make sure that the Baby and Parent Units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone. Move the Baby Unit or Parent Unit 5 feet away from other electrical equipment.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth<sup>™</sup> systems, or microwave ovens, may cause interference with this product. Keep the Baby Unit or Parent Unit at least 5 feet away from these types of products, or switch them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or Baby Unit to different positions in the rooms.

#### Noise interference on your device

- To avoid background noise or echoes, ensure that there is enough distance between your device and the Wi-Fi® Camera Unit.
- Use of other 2.4 GHz products, such as Bluetooth<sup>™</sup> systems or microwave ovens, may cause interference with this product. Keep the Wi-Fi® Camera Unit at least 3 feet away from these types of products, or switch them off if they appear to be causing interference.

#### Lost connection

 Check your Wi-Fi® settings. If necessary, reconnect your Wi-Fi®. Ensure that the Wi-Fi® Camera Unit is switched ON. Wait a few minutes to make the connection with the Wi-Fi® system.

#### If you forgot your password

 If you do not remember your password, tap Forgot Password and submit your e-mail address. A new password will be sent to your e-mail address immediately.





# 9. General Information

If your product is not working properly, read this Quick Start Guide or the User's Guide of one of the models listed on page 1. Contact Customer Service:

Live Chat: hubbleconnected.com Email: support@hubbleconnected.com

# Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Hubble Smart Nursery branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

### What Does this Limited Warranty Cover?

Subject to the items listed below in the section "What is not Covered" BINATONE warrants that this Hubble connected branded product ("Product") will be free from defects in material and workmanship under normal use for a period of 1 year from the date of purchase and that any certified accessory ("Accessory") sold for use with this product will be free from defects in materials and workmanship under normal use for a period of 90-days from the date of purchase. This Limited Warranty is your exclusive warranty and is not transferable.

### What is not covered?

This Limited Warranty excludes and does not cover:

- Normal deterioration or wear resulting from use;
- Damage caused by or resulting from misuse, abuse, or accident;
- Damage caused by or resulting from improper operation or storage;
- Damage caused by or resulting from contact with foreign substances, including, but not limited, to liquid, water, rain, humidity, perspiration, sand, dirt, and/or food;
- Damage caused by or resulting from the use of Non-Hubble Smart Nursery branded or certified Products or Accessories or other peripheral equipment;





- Damage caused by or resulting from modifications, alterations, tampering, improper installation, or repairs by someone other than Hubble connected, BINATONE or their authorized representatives;
- Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories; and,
- Periodic maintenance, repair and replacement of parts due to normal wear and tear.

#### What Other Limitations Are There?

THIS LIMITED WARRANTY SETS FORTH THE ENTIRE LIABILITY OF BINATONE AND CONTAINS YOUR SOLE AND EXCLUSIVE REMEDY. OTHER THAN THIS LIMITED WARRANTY, BINATONE MAKES NO ADDITIONAL REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IF YOUR STATE DOES NOT PERMIT THE DISCLAIMER OF WARRANTIES. THEN THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, REPAIR OR REPLACEMENT IS YOUR SOLE AND EXCLUSIVE REMEDY AGAINST BINATONE AND Hubble Smart Nursery. IN NO EVENT SHALL BINATONE OR Hubble Smart Nurserv's LIABILITY TO REPAIR OR REPLACE YOUR PRODUCT OR ACCESSORY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT AND ACCESSORY AND BINATONE AND Hubble Smart Nurserv's TOTAL LIABILITY FOR DAMAGES ARISING FROM THIS LIMITED WARRANTY SHALL NOT EXCEED THE PRICE YOU PAID FOR THE PRODUCT AND ACCESSORY REGARDLESS OF WHETHER SUCH CLAIM ARISES UNDER CONTRACT, STATUTE, TORT OR OTHERWISE, IN NO EVENT AND UNDER NO CIRCUMSTANCES WILL BINATONE OR Hubble Smart Nurserv BE LIABLE FOR DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES. ALL DISCLAIMERS, LIMITATIONS OF LIABILITY AND MODIFICAITONS OF WARRANTIES STILL APPLY EVEN IF THE LIMITED REMEDY OF REPAIR AND REPLACEMENT FAILS OF ITS ESSENTIAL PURPOSE.





Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may have other rights that vary from one jurisdiction to another.

#### Who is covered?

This Warranty extends only to the first consumer purchaser and is not transferable.

#### What will BINATONE do?

BINATONE or its authorized distributor at its sole discretion will, at no charge, repair or replace any Products or Accessories that do not conform to this Warranty. In the event that replacement is necessary to remedy a defect in material or workmanship, BINATONE may use new or remanufactured products, accessories or parts of equal quality to the original Product or Accessory.

### How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

#### Live Chat: hubbleconnected.com.

#### Email: support@hubbleconnected.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center. You must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, (e) your name, address, email address and telephone number.





These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with your purchase of any Product and/or Accessory.

### FCC and IC regulations (FCC Part 15)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules.

Industry Canada. This device complies with Industry Canada license-exempt RSS standard(s): Operation is subject to the following Two conditions:(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### Download User Guide from website: support.hubbleconnected.com





# 10. Technical Specifications

### **BABY UNIT**

Frequency	2400 MHz to 2483.5 MHz
Image sensor	color CMOS 2M Pixels
Operating Tem- perature	41°F - 104°F
Power Adapter:	Input: 100-240V AC, 50/60Hz, 500mA; Output: 5.0V DC, 1500mA





#### PARENT UNIT

Frequency	2400 MHz to 2483.5 MHz
Display	5" diagonal IPS LCD (touch screen)
Power Adapter:	Input: 100-240V AC, 50/60Hz, 500mA; Output: 5.0V DC, 1500mA <b>WARNING</b> Use only with provided power supply.
Battery (built-in)	Lenovo Corporation (BL253) 3.8V, 2000mAh Lithium-Ion Polymer, recharge- able battery pack <b>WARNING</b> Do not attempt to replace the battery, but contact customer Service if it needs replacing.

Specifications are subject to change without prior notice.





Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. Hubble connected and the Logo, are trademarks or registered trademarks of Hubble connected Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2021 Hubble Connected. All rights reserved.

> US\_EN Version 1.0 Printed in China

